

2013S- SA LOCK TIPPING SKIP



The Safelock skip from Eichinger delivers ultimate safety and efficiency. Standard pallet width forks allow the driver to minimise adjustment. Uncompromising build quality.

A visible heavy duty ram restrains the skip securely to the telehandler. We believe keeping the ram visible is vital to ensure the operative is aware of any potential failure.

| Product Code | SWL (kg) | Capacity (ltrs) | Height (mm) | Width (mm) | Length (mm) | Weight (kg) |
|--------------|----------|-----------------|-------------|------------|-------------|-------------|
| 2013E.8 | 2000 | 1200 | 1360 | 1260 | 1630 | 210 |

Appearance may vary from picture above.

Eichinger Equipment Ltd
69-73 James Road, Frimley, Camberley, GU15 2RH
T: 01276 605 970 F: 01276 682 913 E: sales@eichinger.co.uk

The following instructions must be read and understood by each intended user of this equipment; if there is anything you do not understand contact Eichinger Equipment Ltd.

Ensure the equipment is adequate for the job you need to carry out.

You must not operate this equipment if you are under the influence of alcohol, drugs or if you are feeling unwell.

A risk assessment should be carried out prior to moving or using this equipment.

The following PPE (Personal protective equipment) should be worn when using this equipment:

Gloves / Goggles / Hard Hat / Steel Toecap boots / Hi-Vis Vest

We also suggest suitable clothing should be worn.

Familiarise yourself with the equipment, its use and how it works!

As this equipment is used at multi-level, ensure the intended area for use is clear of overhead cables and power lines or similar hazards which may affect its safe use. This equipment must always be used in conjunction with your site safety policies.

The work area must be clear of obstructions with adequate space for the operative to work safely around the equipment.

Check and ensure the equipment is inspected and in a safe condition prior to its use. Also ensure that its load is stable and secure.

Attachment:

Set the telehandler's forks to the appropriate width to suite the tipping skips fork pockets.

Approach the tipping skip with the telehandler and line the forks up with the fork pockets. Insert the forks into the fork pockets ensuring the skip is mounted as far back on the forks as possible.

The SafeLock assembly is designed to lock automatically onto the telehandler's forks, this should be checked everytime the skip is attached to the forks. If the the locking mechanism does not work then the skip must not be used by anyone and contact with Eichinger Equipment Ltd must be made for advise.

Once the operator has identified the locking mechanism is working correctly the skip can be transported to it's destination for filling and landed on level ground.

Filling:

Ensure the load is no bigger than the skip in either dimensions or weight (Under no circumstances should the intended load sit on top of the skip). The skip must not be filled whilst raised in the air.

Emptying:

Once loaded, repeat the Attachment process detailed above and transport the skip to it's emptying destination. The skip should be kept at a low level and should not impede the visibility of the telehandler driver. Now continue to the required emptying point.

Once at the emptying point simply raise the skip and use the telehandler tilt function to discharge into the intended area (skip).

